



Safety Instructions

1. Use only under adult supervision.
2. **Use only the foam axes included with the game.** Do not use real axes or other hard objects.
3. Be sure that there is plenty of clearance between the player and spectators.
4. Keep spectators clear from the sides and back of canvas to prevent them from being struck by a deflected or errant shot.
5. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
6. **NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!!**
7. Use caution when setting up or taking down the game. The sections of tubing can come apart and fall down causing injury.

Twister Display

49207 Calcutta Smith Ferry Road

East Liverpool, Ohio 43920

1 800 637-3656 — 1 (330) 386-1270

www.twisterdisplay.com