



Packing List

<u>DESCRIPTION</u>	<u>QUANTITY</u>
VINYL CANVAS	1
"FOUR-WAY" FITTINGS	2
"ELBOW" FITTINGS	2
PIPE A — 41.5"	4
PIPE B — 34" (TAPERED)	4
PIPE C — 36" (FEET)	4\
HORN	1
HORN-HOLDER	1
STAKES	4
SMALL RINGS	3
LARGE RINGS	3
STORAGE/CARRYING CASE	1

Twister Display

49207 Calcutta Smith Ferry Road

East Liverpool, Ohio 43920

1 800 637-3656 — 1 (330) 386-1270

www.twisterdisplay.com

Ring The Unicorn

Assembly Instructions

1. Select a level area to operate game with plenty of room to allow for a line to form.
2. Assemble framework, per sketch. Note that the eight longer pieces of tubing are used to form the sides (2 per side) while the four shorter capped pieces are to be used to create the base. (Be sure to tighten down the fittings using the small bolts on them.)
3. Attach canvas to the framework using the Velcro straps.
4. Place the horn-holder through the back and attach Velcro.
5. Place horn over the horn-holder.
6. If using game outdoors, it is strongly suggested that you use the



stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.

7. Never fold up canvas wet. Always allow to dry thoroughly first.



Twister Display

 
49207 Calcutta Smith Ferry Road

East Liverpool, Ohio 43920

1 800 637-3656 — 1 (330) 386-1270

www.twisterdisplay.com

Ring The Unicorn

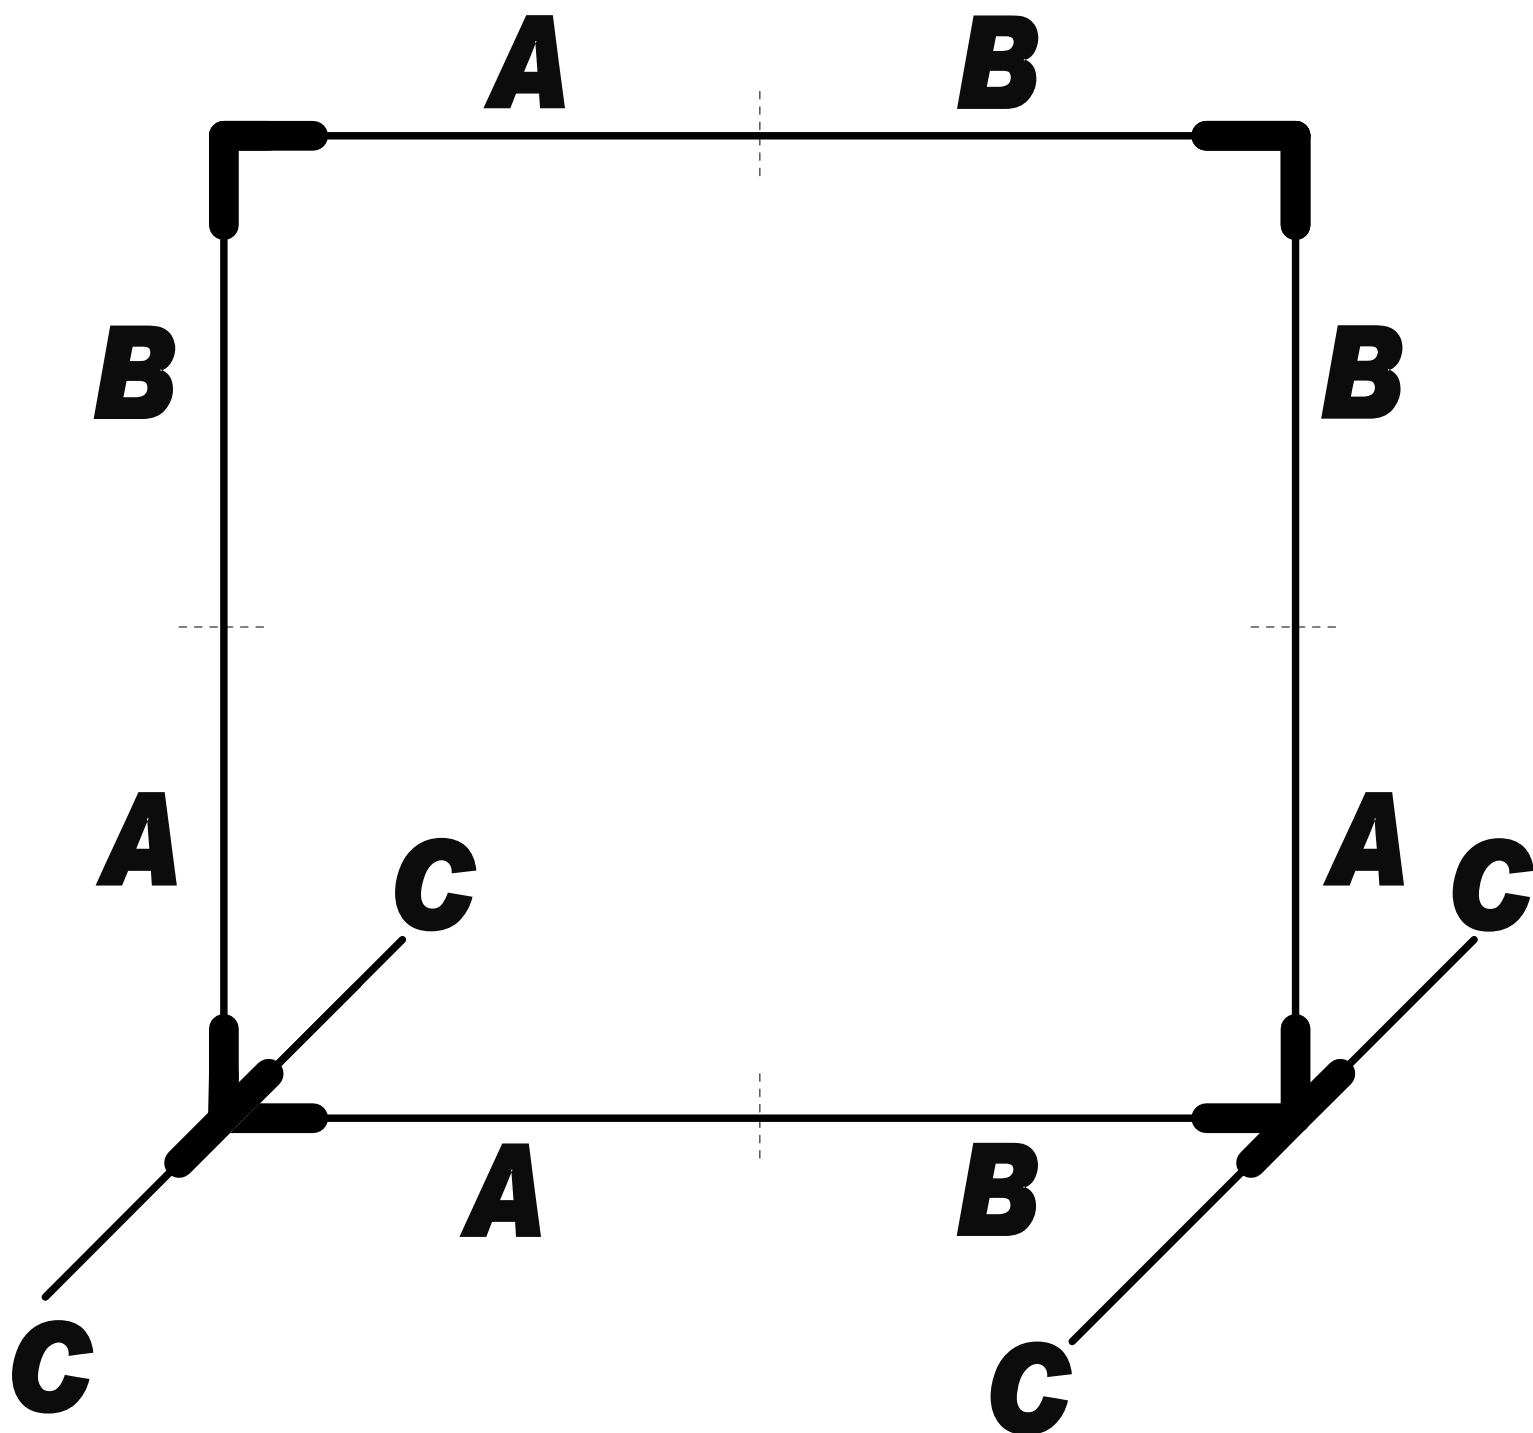

Twister Display

49207 Calcutta Smith Ferry Road

East Liverpool, Ohio 43920

1 800 637-3656 — 1 (330) 386-1270

www.twisterdisplay.com



Safety Instructions

1. Use only under adult supervision.
2. **IMPORTANT**: Be sure the horn is covering the peg.
3. Be sure that there is plenty of clearance between the player and spectators.
4. Keep spectators clear from the sides and back of canvas to prevent them from being struck by a deflected or errant throw.
5. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
6. **NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!!**
7. Use caution when setting up or taking down the game. The sections of tubing can come apart and fall down causing injury.
8. Use only the toss items included with the game. Do not use hard balls or other hard objects.

Canvas Care

1. If game becomes wet, dry thoroughly before storing.
2. Fold the canvas *inward* to help protect and keep it clean.
3. Canvas can be cleaned with rubbing alcohol when necessary. If your game involves Velcro, clean the hook and loop fabric with dry brush to knock out the dirt. If Velcro fabric is badly soiled, use upholstery cleaner.

Twister Display

49207 Calcutta Smith Ferry Road

East Liverpool, Ohio 43920

1 800 637-3656 — 1 (330) 386-1270

www.twisterdisplay.com