

# SHOOTIN' GALLERY

## Packing List

<u>DESCRIPTION</u>	<u>QUANTITY</u>
PAINTED VINYL CANVAS	1
"FOUR-WAY" FITTINGS	2
"ELBOW" FITTINGS	2
LENGTHS OF TUBING (SWEDGED)	4
LENGTHS OF TUBING (UNSWEDGED)	4
LENGTHS OF TUBING (CRIMPED)	4
STAKES	4
CROSS BOW	2
DARTS	12
STORAGE/CARRYING CASE	1

## Twister Display

49207 Calcutta Smith Ferry Road

East Liverpool, Ohio 43920

1 800 637-3656 — 1 (330) 386-1270

[www.twisterdisplay.com](http://www.twisterdisplay.com)

# SHOOTIN' GALLERY

## Assembly Instructions

1. Select a level area to operate game with plenty of room to allow for a line to form.
2. Assemble framework, per sketch. Note that the eight longer pieces of tubing are used to form the sides (2 per side) while the four shorter capped pieces are to be used to create the base. (Be sure to tighten down the fittings using the small bolts on them.)
3. Attach canvas to the framework using the Velcro straps.
4. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
5. Turn crossbow over and remove prod housing screw and bracket.
6. Slide metal prod, notch first, into slot provided making sure the string is riding on top of launching barrel.
7. Replace bracket and screw so bracket lip covers prod and is in prod slot. Tighten screw.
8. If using the crossbow is inadvisable, have players throw the darts or the Velcro balls instead.
9. Never fold up canvas wet. Always allow to dry thoroughly first.

## *Canvas Care*

1. If game becomes wet, dry thoroughly before storing.
2. Fold the canvas *inward* to help protect and keep it clean.
3. Canvas can be cleaned with rubbing alcohol when necessary. If your game involves Velcro, clean the hook and loop fabric with dry brush to knock out the dirt. If Velcro fabric is badly soiled, use upholstery cleaner.

## Twister Display


49207 Calcutta Smith Ferry Road

East Liverpool, Ohio 43920

1 800 637-3656 — 1 (330) 386-1270

[www.twisterdisplay.com](http://www.twisterdisplay.com)

# SHOOTIN' GALLERY

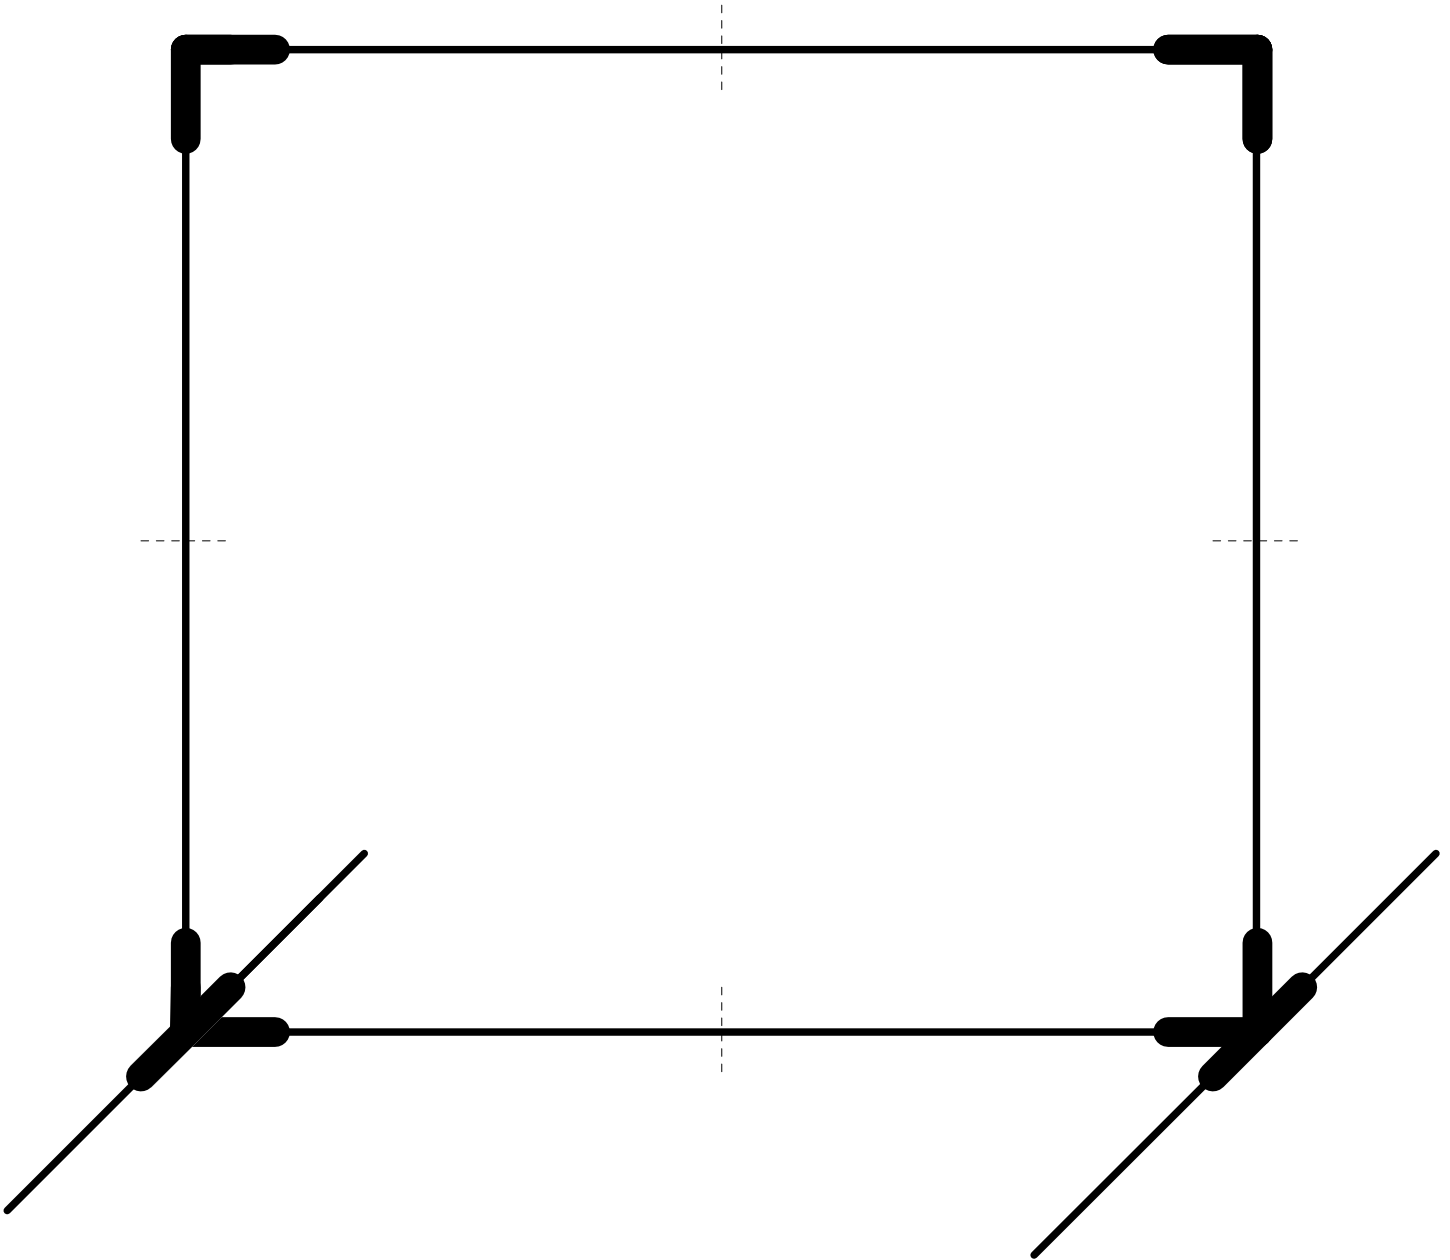

## Twister Display

*49207 Calcutta Smith Ferry Road*

*East Liverpool, Ohio 43920*

1 800 637-3656 — 1 (330) 386-1270

[www.twisterdisplay.com](http://www.twisterdisplay.com)

# SHOOTIN' GALLERY

## Safety Instructions

1. Use only under adult supervision.
2. Be sure that there is plenty of clearance between the player and spectators.
3. Keep spectators clear from the sides and back of canvas to prevent them from being struck by a deflected dart or errant shot. (Inexperienced players may miss the canvas entirely.)
4. NEVER ALLOW A PLAYER TO POINT THE CROSSBOW AT OR SHOOT ANOTHER PERSON OR ANIMAL. (Darts May cause serious eye injury.)
5. When a player is shooting, make sure nothing is in the string's path such as hair or fingers and nothing can be struck as the limb tips go forward during the shot.
6. NEVER LEAVE CROSSBOW UNATTENDED.
7. Use only the special Velcro Safety Darts included with the game.
8. Never use another type of projectile for the safety of player & spectators and maintenance of the canvas.
9. Make sure the Velcro Safety Darts are always in good condition. (Replacements may be purchased separately.)
10. Game operator must review the shooting guidelines with players. If the operator determines a player is shooting in a dangerous manner, they must immediately stop their turn.
11. The operator should remove the crossbow from the player before approaching the canvas to remove the darts.
12. If using game outdoors, it is strongly suggested that you use the stakes provided on either side of the bottom supports. Use sandbags on pavement. And in a breeze, use sandbags with the stakes.
13. **NEVER USE THE GAME IN STRONG WINDS OR LIGHTENING!!**
14. Use caution when setting up or taking down the game. The sections of tubing can come apart and fall down causing injury.
15. If using the crossbow is inadvisable, have players throw the darts or the Velcro balls.

## Twister Display

*49207 Calcutta Smith Ferry Road*

*East Liverpool, Ohio 43920*

1 800 637-3656 — 1 (330) 386-1270

[www.twisterdisplay.com](http://www.twisterdisplay.com)

# SHOOTIN' GALLERY

## Parts Prices

<u>Canvas</u>	<u>\$450</u>
<u>Case</u>	<u>\$99</u>
<u>Elbow fitting</u>	<u>\$10</u>
<u>Four-way fitting</u>	<u>\$15</u>
<u>Framework</u>	<u>\$150</u>
<u>Tubing (swedged)</u>	<u>\$20</u>
<u>Tubing (unswedged)</u>	<u>\$20</u>
<u>Tubing (w/rubber feet)</u>	<u>\$15</u>
<u>Stakes (set of 4)</u>	<u>\$5</u>
<u>Velcro Darts (12 Pack)</u>	<u>\$24</u>
<u>Cross Bow</u>	<u>\$39</u>

## Twister Display

49207 Calcutta Smith Ferry Road

East Liverpool, Ohio 43920

1 800 637-3656 — 1 (330) 386-1270

[www.twisterdisplay.com](http://www.twisterdisplay.com)