

Includes:

2 -- Hinges w/shims

4 -- 2" 5/16 Carriage Bolt

4 -- 5/16 Lock Nut



Tools Needed...



3 Clamps



***Large
Phillips
Screwdriver***






***Put the seat in place.
Make sure that it
is straight and even.***




***Make sure that the
latch is able to
completely close
over the roller.***



Secure with clamps.

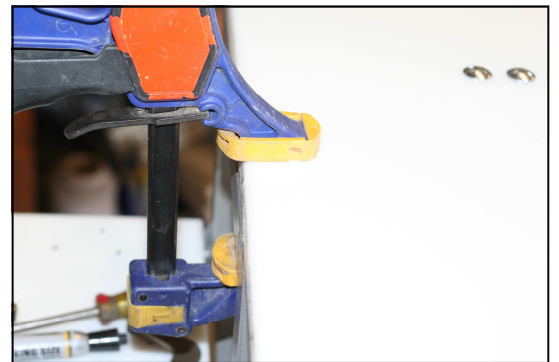

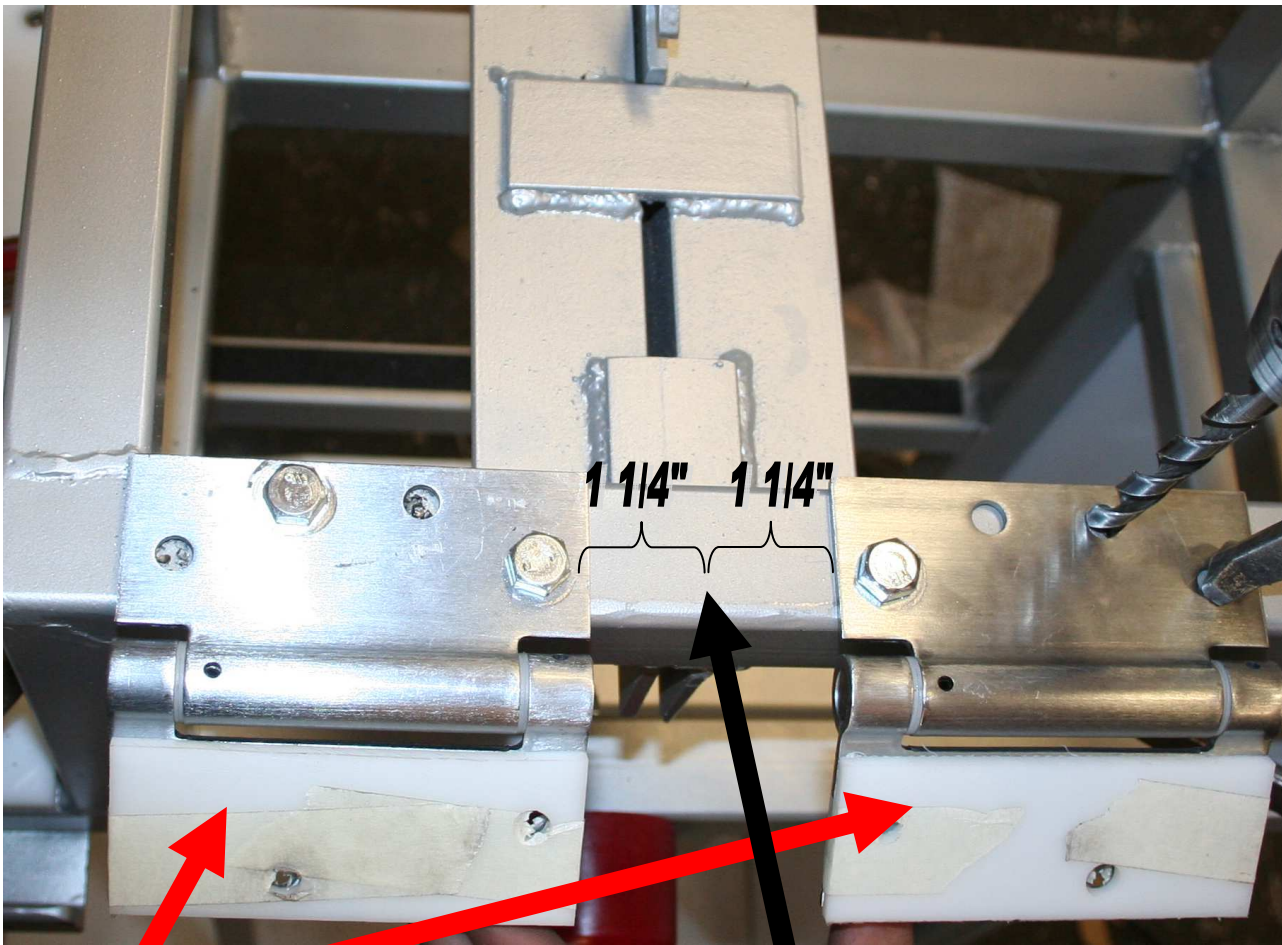


**Leave shims taped to the hinges.
(The shims should be on the top and toward the front of the unit.)**

Find the center of the trigger mechanism and measure 1 1/4" on either side for placement of the hinges.

**Using a 3/8" bit, drill the hinge holes through the frame.
Drill the hole nearest the center.
Skip a hole, and drill the next.
(Only drill 2 holes per hinge.)**

***Insert a marker through the hole in the
hinge and through the shim.
Mark the hole nearest the center.
Skip a hole, and mark the next.
(Only drill 2 holes per hinge.)***

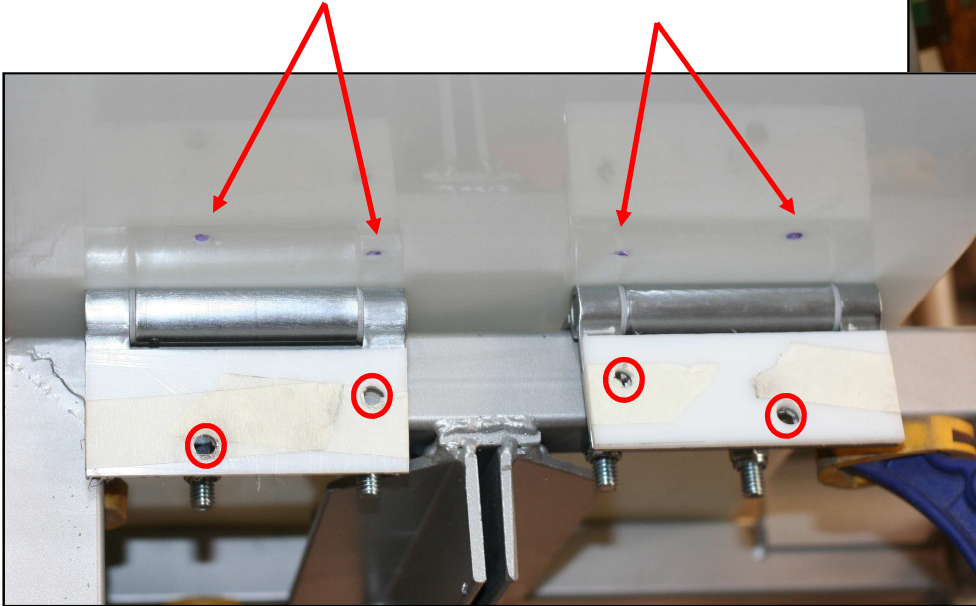

***Remove the seat,
flip it over, and
drill holes.
(Be sure to keep
the drill bit
perpendicular to
the seat.)***



***Insert carriage bolts
from the top.***

***Attach lock nut from
underneath and tighten.***

